



INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS

Evolution & Evolution LT (Low Temperature) Floodlight Luminaires ATEX & IECEx

Important: Please read these instructions carefully before installing or maintaining this equipment. Good electrical practices should be followed at all times and this data should be used as a guide only.

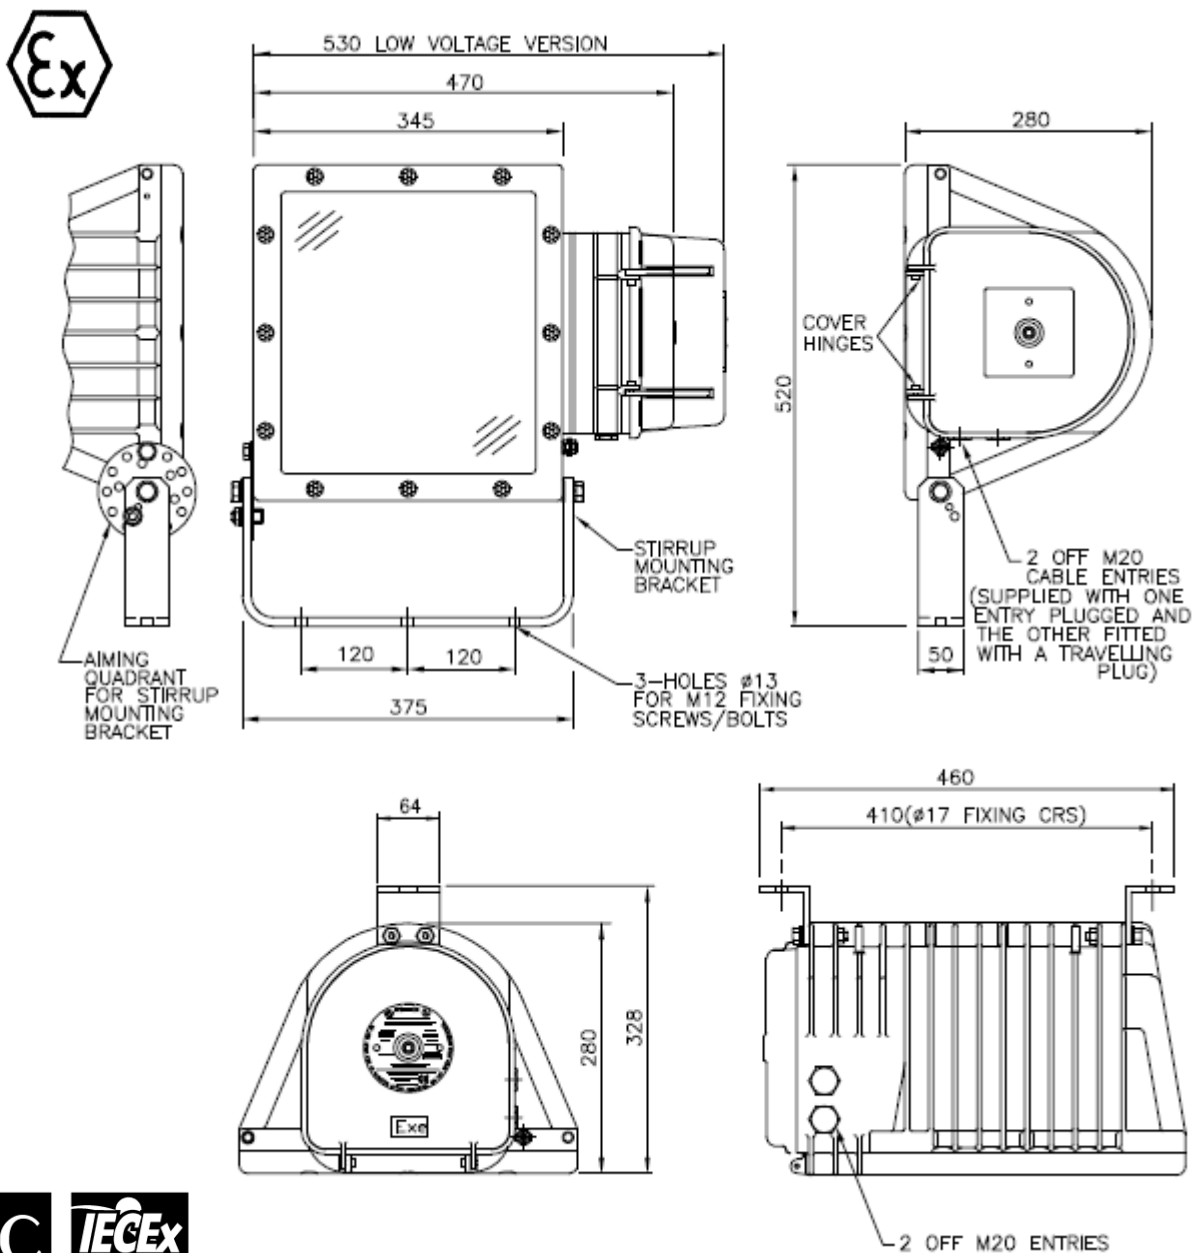



Type Of Protection	Ex d e mb (flameproof and increased safety, encapsulation), Ex tb (dust)	
Protection Standards	(IEC) EN 60079-0, 60079-1, 60079-7, 60079-18, EN 60079-31.	
Area Classification	Zone 1 and Zone 2 areas to (IEC) EN 60079-10-1 Zone 21 and Zone 22 areas to (IEC) EN 60079-10-2	
Installation	(IEC) EN 60079-14	
Certificate	Evolution	Evolution LT
	IEC certificate of conformity IECEx BAS12.0043 EC type examination certificate Baseefa98ATEX2373 (X applies to 120V version)	IEC certificate of conformity IECEx BAS12.0042 EC type examination certificate Baseefa98ATEX2372 (X applies to 120V version)
Equipment Coding	Ex d e mb IIC T3/T4 Gb $-20^{\circ}\text{C} \leq \text{Ta} \leq \text{T}^{\circ}\text{C}$ Ex tb IIIC T** $^{\circ}\text{C}$ Db IP6X (see table 0 for details)	Ex d e mb IIB T3/T4 Gb $-50^{\circ}\text{C} \leq \text{Ta} \leq \text{T}^{\circ}\text{C}$ Ex tb IIIC T** $^{\circ}\text{C}$ Db IP6X (see table 0 for details)
ATEX Coding	II 2GD	
Ingress Protection	IP66/67 to EN/IEC 60529	
CE Mark 	<p>The CE marking of this product applies to "The Electrical Equipment (Safety) Regulations 2006", "The Electromagnetic Compatibility Regulations 2004", the "Waste Electrical and Electronic Equipment Regulations 2006" and the "Equipment and Protective Systems intended for use in Explosive Atmospheres Regulations 1996". [This legislation is the equivalent in UK law of EU directives 2014/35/EU, 2014/30/EU, 2012/19/EU and 2014/34/EU respectively].</p> <p>The Equipment is declared to meet the provisions of the ATEX directive (2014/34/EU) by reason of the EC Type Examination and compliance with the Essential Health and Safety Requirements. M Poutney Technical Manager</p>	

SPECIAL CONDITIONS FOR SAFE USE

The 120V version of this product must only be mounted so that the fastening points are at the same height as each other, i.e. it must be mounted horizontally not on its side. Please refer to the product certificate for further information

1.0 Introduction - Evolution ATEX Floodlight

The "Evolution" is an entirely new design. The lamp is contained in an enclosure with the cover glass permanently attached. The cover retaining screws have their heads filled and must not be removed. (This would invalidate the certificate).

The mains terminals and Ex e protected ballast are contained in an Ex e chamber on the end of the luminaire. This is accessed by a hinged cover held by a single bolt. Inside this chamber is an Ex d enclosure built into the main body casing which contains the correction capacitor.

The ignitor is contained with the lampholder in an Ex d assembly, which is retained in the end wall of the lamp enclosure using a bayonet arrangement locked in place by the chamber fastening screw. The supply to this housing is through a cable, which can also be used to select the tapping. The ranges of lamps, which can be catered for, are 150, 250 and 400W SON/T and MBI/T, 600W SON/T with remote ballast and 500W T/HAL with E40 and R7s lamp caps. Wide (mottled), medium (semi-specular) and narrow (specular) beam reflectors are available. This must be specified when ordering.

In addition there is a low voltage version which has a transformer mounted into an enlarged end cap. This allows the use of power supplies in the range 110-120V 50/60 Hz.



Note: *The range of lamps available is as indicated in TABLE 0.
A range of mounting accessories is also available.*

2.0 Storage

Luminaires and control gearboxes are to be stored in cool dry conditions preventing ingress of moisture and condensation.

Any specific instructions concerning emergency luminaires must be complied with.

3.0 Installation and Safety

3.1 General

There is no health hazards associated with this product whilst in normal use. However care should be exercised during the following operations. Installation should be carried out in accordance with (IEC) *EN 60079-14* or the local hazardous area code of practice, whichever is appropriate. Fitting of specified insulating material to be adhered to where a specific fire resistance rating is required.

In the UK the requirements of the '*Health and Safety at Work Act*' must be met.

Handling and electrical work associated with this product to be in accordance with *the 'Manual Handling Operations Regulations'* and '*Electricity at Work Regulations, 1989*'. Your attention is drawn to the paragraphs (i) 'Electrical Supplies', (ii) 'Electrical Fault Finding and Replacement' and (iii) 'Inspection and Maintenance'. The luminaires are Class 1 and should be effectively earthed.

The luminaires are quite heavy and suitable means of handling on installation must be provided.

Certification details on the rating plate must be verified against the application requirements before installation.

The information in this leaflet is correct at the time of publication. The company reserves the right to make specification changes as required.

3.1.1 Use in Combustible Dust Atmospheres

Where the equipment is used in ignitable dust atmospheres reference must be made to the selection and installation standards in order that the equipment is used correctly. In particular this applies to the de-rating of surface temperature for use where dust clouds may be present. Dust layers should not be allowed to accumulate on the fitting surface and good housekeeping is required for safe operation. Dust in layers has the potential to form ignitable clouds and to burn at lower temperatures.

Refer to EN (IEC) 60079-10-2 & EN (IEC) 60079-14 for additional details of selection and installation.

3.1.2 Hybrid Mixtures – Gas and Dust

Where hybrid mixtures exist as a potentially explosive atmosphere, consideration should be given to verifying that the maximum surface temperature of the luminaire is below the ignition temperature of the hybrid mixture.

3.2 Tools

8, 6, 5mm A/F socket keys.

3mm and 5mm flat blade screwdriver.

19mm and 17mm A/F spanner.

Suitable spanners for installing cable glands.

Pliers, knife, wire strippers/cutters.

3.3 Electrical Supplies

The supply voltage and frequency should be specified when ordering. A maximum voltage variation of +6%/-6% on the nominal is expected. (The safety limit for T rating is +10%). Luminaires should not be operated continuously at more than +6%/-10% of the rated supply voltage of the control gear or tapping. **Care is needed connecting to the nominal UK mains supply.** The user must determine the **actual** underlying site supply and purchase or adjust accordingly. In this case, the luminaires have multi-tapped control gear that can be set to a range of 50 and 60 Hz voltages. Different ballasts are used for 50 and 60 Hz. The tappings are shown on the control gear and the limits are shown on the rating plate. They are selected by changing the position of the wire feeding the ballast. The low voltage version feeds the ballast via the transformer and for simplicity the ballast selection tappings are shown as 110/115/120V which represents the incoming mains supply voltage not the volts into the ballast.

If the equipment is located in sections of the system where the voltage is higher or lower than nominal, an appropriate voltage tap should be selected, but care must be taken to log or mark the equipment so that the

tapping is re-set if the equipment is re-located. If in doubt, tapplings should be set on the high side. 10V maximum drop below nominal is desirable for HPS and advised for MBI. The light output will be reduced. The figures given are at the luminaire. Where MBI/Metal Halide lamps are used, the tapping must be set accurately for best performance.

Where shore or construction site supplies are used, which are different to the service supplies, the tapplings should be re-set. If not, advice on the effect of these temporary supplies should be sought from the Technical Department.

3.4 Lamps

All the HPS lamps used in this range are of a standardised type and there is no preference between makes, or in the case of HPS, colours. The cap is E40. The Evolution uses tubular lamps. If mixed installations are used, care must be taken to ensure that the correct lamp is fitted on installation and replacement. The 250W MBI lamp is the 3.A type that runs on a SON ballast. The control gear supplied for the 400W MBI lamp is designed to run the standard "SON compatible" OSRAM lamp which has a current rating of 4.2A. Other SON compatible lamps may be used. **The obsolete 3.5A 400W Metal halide lamp must not be used in this luminaire.** HPS lamps substantially maintain their light output to the end of their electrical half life, which can be up to 24,000 hours. However, lamp replacement at around 16,000 hours is desirable to avoid piecemeal replacement on a large scale. MBI lamps have a shorter life and higher lumen depreciation, **HPS and MBI lamps should be replaced shortly after they do not light.** One indication of the end of life for HPS lamps is 'cycling' where the lamp extinguishes then re-ignites after a minute or so interval. If discharge luminaires are burned continuously, they should be switched off occasionally to allow old lamps to fail to re-ignite, rather than possibly become diodes with detrimental effects on control gear. Also see section 4.0

The above information is current at the time of publication. The development of lamps and control gear is ongoing and detailed advice on lamp performance can be obtained from the Technical Department or the lamp supplier.

Incandescent lamps and tungsten halogen must be selected for the supply voltage. Running at over the rated supply voltage will reduce life and at greater than +10% will compromise the T rating.

Important: *HPS and MBI circuits should not be energised without a lamp fitted. HPS & MBI lamps with internal ignitors must not be used.*

3.5 Mounting

Luminaires should be installed where access for maintenance is practical and in accordance with any lighting design information provided for the installation. This will usually consist of aiming points and aiming angles. The mounting arrangements should be secured with lock washers or self locking nuts and bolts.

The luminaire should be mounted with the lamp axis horizontal or with the lamp vertical and the terminal cover downwards.

The luminaire is provided with a mechanism to adjust and **lock** the floodlight to 5-degree intervals. The outer ring of holes in the adjustment disc gives increments of 30 degrees, this is the coarse adjustment and is used second. The inner ring has 6 holes giving offsets of plus 0,5,10,15,20 or 25 degree on the 30-degree increments, this setting is used first. The numbers indicate the degrees but the holes are not in order. They can be viewed through the hole in the mounting bracket. The unit is set up with the terminal cover end tightened enough to allow the unit to be moved smoothly. Fine adjustment is made by selecting the correct hole and loosely fixing in the mounting bracket. The pivot bolt is then tightened still, allowing controlled movement. The bolt securing disc to case is unscrewed from the case and reinserted when the coarse adjustment gives the required correct angle. When everything is correct all bolts are fully tightened. Recommend Torque values Main stirrup pivot M12 Bolt 30Nm, case bolt 16Nm, bracket bolt 20Nm. Example 1: Inner ring set at '0', then by moving the outer ring, 0°, 30°, 60° angles are achieved. Example 2: Inner ring set at '5', then by moving the outer ring, 5°, 35°, 65° angles are achieved.

When the luminaire is mounted using the pendant mount lowbay bracket arrangement, the brackets must be mounted on a horizontal surface with the luminaire aimed glass downwards. The minimum distance between the luminaire and illuminated surface, directly in front of the luminaire, is 1 metre.

The 110-120V version must only be mounted with the bracket fitted horizontally.

3.6 Cabling and Cable Glands

3.6.1 Cables

The cable entry temperatures are given as the rise over the maximum rated ambient (T_{amb}). This allows the user to adjust the cable specification for actual maximum site ambient.

The maximum conductor size is 6mm². Internal and external earth points are provided. 300/500V cable ratings are adequate and no special internal construction is necessary as the terminations are Ex e. The standard looping cable size is 6mm². The selection of cable size must be suitable for the fuse rating. Some guidance on this is given below. The fuse ratings apply to the circuit on the supply side of the control gear.

3.6.2 Cable Glands

This apparatus is certified to (IEC) EN 60079-0, (IEC) EN 6007-1, (IEC) EN 60079-7, (IEC) EN 60079-31.

Cable glands for entry into Ex e enclosures when fitted with any gland to body sealing method and the supply cable, must reliably maintain the IP rating of the enclosure with a minimum value of IP54. The cable gland must withstand an impact value of 7Nm or 4Nm where the risk of mechanical damage is low.

Sealing plugs must be similarly rated and a tool must be used for their removal. Where the cable is not reliably clamped externally to the apparatus, the cable gland must clamp the cable against a pull in Newtons of 20 x the cable OD in mm for non-armoured cable and 80 x the cable OD for armoured cable. Selected metal industrial cable glands may meet this requirement.

Plastic cable glands must be Ex certified. Glands for metal covered mineral insulated cables must be Ex e certified.

Two tapped cable entries are provided, one with a plug and seal suitable for permanent use, the other has a travelling plug. M20 x 1.5 entries are standard, other sizes are available on request. Where brass cable glands are used in a corrosive environment cadmium or nickel plating should be used.

3.7 Cable Connection

The cable connections are made by slackening the end cover bolt and swinging the cover to one side, it can be latched in place by sliding the hinge point. The conductors should be bared back so that they make full contact in the terminals, but the bare conductor should not be more than 1mm beyond the terminal. Unused terminal screws should be tightened. The core must be identified by polarity and connected in accordance with the terminal markings. Before re-fitting the cover, a final check on the correctness of connections should be made. Cover bolt torque 10Nm.

3.7.1 Selecting the Tapping

The tapping is set on the supply side of the ballast terminal block, the supply wire going to the appropriate tap and the voltages are shown on the ballast label. The ignitor connection goes into the two terminals next to the ignitor housing, the blue connection is always to the end neutral terminal, the live brown connection goes into the second terminal. The luminaire is factory set at the highest tapping, or that given with the order. The tapping suitable for the supply is selected or confirmed on installation. The unused connection terminals are to be fully tightened to prevent incorrect selection during initial lamp installation or relamping.

3.8 Fitting lamps

Isolate the supply before opening the end cover.

Make sure the correct lamp is selected as detailed above. Access for fitting lamps is gained through the end hinged cover. The ignitor cable connections are unscrewed and the ignitor housing turned anti-clockwise to release. The ignitor housing fixing screws are thread locked into place and are not designed to be removed in service. The lamp should be firmly screwed into place and the housing replaced. Reconnect the cables, make a final check on the tapping and mains terminals then close the hinged cover and tighten fastening bolt. (The front cover is permanently fixed. The bolts have been covered with a hard setting resin to prevent removal, which would invalidate the certificate). Note that the end cover will not close unless the ignitor/lamp housing is in its correct position.

3.9 Inspection and Maintenance

Visual inspection should be carried out at a minimum of 12 monthly intervals and more frequently if conditions are severe, refer to (IEC) EN 60079-17. The time between lamp changes could be very infrequent and this is too long a period without inspection.

3.9.1 Routine Examination

The equipment must be de-energised before opening and note taken of the rated opening delay period, 15 minutes if there is a hazardous atmosphere present. Individual organisations will have their own procedures. What follows are guidelines based on (IEC) *EN 60079-17* and on our experience:

- 1 Ensure the lamp is lit when energised and that the lampglass is not damaged.
- 2 When de-energised and left to cool, there should be no significant sign of internal moisture. If there are signs of water ingress, the luminaire should be opened up, dried out, and any likely ingress points eliminated by re-gasketing, re-greasing or other replacement.
- 3 Check the terminal chamber gasket for any damage or permanent set and replace as required, the gasket is held in place by a few spots of silicone RTV.
- 4 Check the cable gland for tightness and nip up if necessary.
- 5 Check any external earthing.
- 6 Examine the front glass for any signs of damage. If thought necessary, the fillet of silicone sealant can be re-sealed with a proprietary brand of clear RTV silicone. ***If the glass is damaged the luminaire must be returned for servicing.***
- 7 The terminal chamber should be opened periodically and checked for moisture and dirt ingress. The cable connections should be checked for tightness. The gasket should be checked for cracks or lack of elasticity, and if necessary, replaced.
Cover bolt torque: 10Nm.
- 8 The ignitor housing flameproof path is cylindrical and can not be readily checked, it will not go out of shape. The ignitor housing securing bolts are designed to be fixed in place and must not be removed. When relamping, make sure the flameproof spigot path is free of dirt and slides into place smoothly. A little molybdenum spray (*Dow Corning MOLYKOTE*) can be used.
- 9 Check that mountings are secure and the adjusting disc bolts are tight.
- 10 Clean the lampglass.
- 11 If it has been suspected that the luminaire has mechanical damage, a stringent workshop overhaul will be required. Where spares are needed, these must be replaced with factory specified parts. No modifications should be made without the knowledge and approval of the manufacturer.

4.0 Electrical Fault Finding and Replacement

Any fault finding must be done by a competent electrician with the luminaire isolated and, if carried out with the luminaire in place, under a permit to work.

With HPS and MBI lamps the ignitor can become faulty. If the lamp is fitted, the choke has continuity and the connections are good and correct, they should produce an 'attempt to start' effect and a buzzing sound from the ignitor. It will be unusual to have no other parts available to perform a substitution fault finding routine and this is the normal procedure. Control gear will not normally go open circuit unless it has overheated first and the signs of this are obvious, being severe discoloration of the paint on the gear and cracks in any exposed insulation. Similarly, a bad contact at the lamp cap will usually result in signs of overheating.

The ballast is fitted with a self-resetting thermal cut-out that will open the circuit if the temperature of the ballast exceeds a safe value. This cut-out will then close when the temperature falls again.

The transformer (if fitted) is also fitted with a thermal cut-out. The operation of this TCO is as per the ballast cut-out except that it will not reset until the mains power has been dis-connected.

Before re-assembling, all connections should be checked and any damaged cable replaced.

5.0 Fuse Ratings

The fuse ratings for HID lamp circuits need to take account of three components of circuit current.

- 1) Current inrush to PFC capacitors which can be up to 25 x the rated capacitor current and last 1-2 milliseconds
- 2) Lamp starting current including steady capacitor current which together may decline from up to 200% of normal at 10 seconds after switch-on to normal after 4 minutes.
- 3) Rectification effects caused by asymmetrical cathode heating for a few seconds after starting, this effect is random and very variable.

With the availability of MCB's with a wide range of characteristics, the individual engineer can make a better judgement of what is required. Use MCB's suitable for inrush currents to reduce ratings. The normal capacitor current will probably be the determining factor, 0.076A per μF at 240V, 50Hz (adjust for other voltages by multiplication, x 6/5 for 60Hz). For HBC fuses use 1.5 x normal capacitor current. All calculations must satisfy wiring regulations. For Tungsten Halogen inrush use 8 x rated current. For the low voltage version the use of slow blow type fuses or MCB's are recommended to allow for the inrush of the transformer.

Note: For starting and running currents for 240V/120v, 50Hz using internal control gear see TABLE 1. Conventional matrix for HBC fuses is outlined in TABLE 2.

6.0 Disposal of Material

The unit is mostly made from incombustible materials. The capacitor is of the dry film type and does not contain PCB's. The control gear contains plastic parts and polyester resin. The ignitor contains electronic components and synthetic resins. All electrical components may give off noxious fumes if incinerated. Take care to render these fumes harmless or avoid inhalation. Any local regulations concerning disposal must be complied with. Any disposal must satisfy the requirements of the WEEE directive [2012/19/EU] and therefore must not be treated as commercial waste. The unit is mainly made from incombustible materials. The control gear contains plastic, resin and electronic components. All electrical components may give off noxious fumes if incinerated.


6.1 Lamps

Incandescent lamps and discharge lamps in modest quantities are not "special waste". The outer envelope should be broken in the container to avoid injury.

This applies to the UK, there may be other regulations on disposal operating in other countries.

Re-cycling facilities are becoming available.

Important: Do not incinerate lamps.

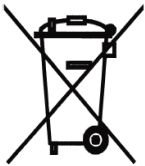

To comply with the Waste Electrical and Electronic Equipment directive 2012/19/EU the apparatus cannot be classified as commercial waste and as such must be disposed of or recycled in such a manner as to reduce the environmental impact.

Tables 0/1/2

Table 0 Maximum Ambient and Temperature Ratings

Refer to Section: 1.0

Lamp	Wattage	Tamb T*°C	Temp. Rating	Dust Rating T**°C	Cable Rating °C	Cable Rise °C
T/HAL (E40)	500W	40	T3	195	90	50
T/HAL (R7s)	500W	55	T3	195	80	40
SON/T	150	40	T4	130	80	40
SON/T	150	55	T3	175	90	35
SON/T	250	40	T4	130	80	40
SON/T	250	55	T3	175	90	35
SON/T	400	40	T3	175	80	40
SON/T	400	55	T3	175	95 (100)	40 (45)
SON/T	600	35	T3	195	90	55
MBI-T	150	40	T4	130	80	40
MBI-T	150	55	T3	175	90	35
MBI-T	250	40	T4	130	80	40
MBI-T	250	55	T3	175	90	35
MBI-T	400	40	T3	195	80	40
MBI-T	400	55	T3	195	90 (100)	35(45)



Figures in brackets indicate the values for the low voltage version where they are different to the 240v version

Table 1 Starting and Running Currents

Refer to Section : 5.0

Lamp	Lamp A	Start A	Run A	Capacitance µF	Circuit Power (W)
150W HPS	1.8	1.45 (3.1)	0.8 (1.7)	20	175
250W HPS	3.0	2.35 (4.9)	1.3 (2.7)	30	285
400W HPS	4.6	4.0 (7.8)	2.2 (4.3)	40	445
600W HPS	6.8	5.6	3.1	60	645
150W MBI	1.8	1.6 (3.1)	0.8 (1.7)	20	175
250W MBI	3.0	2.7 (4.9)	1.35 (2.7)	30	285
400W MBI	4.2	4.0 (7.8)	2.2 (4.3)	40	445

Figures in brackets indicate currents for the low voltage version at 120V 50Hz.

Notes: *Minimum power factor correction: 0.85.
The start and run currents are corrected.*

Table 2 Fuse Ratings

Refer to Section : 5.0

Lamp Wattage	Number of Lamps					
	1	2	3	4	5	6
150W	4A	6A	10A	10A	16A	16A
250W	10A	16A	16A	20A	20A	20A
400W	16A	20A	20A	25A	25A	32A
600W	16A	20A	25A	32A	32A	40A


 
For low voltage version increase fuse sizes by a factor of two.

Chalmit Lighting is a leading supplier of Hazardous Area lighting products

	CHALMIT LIGHTING PO Box 5575 Glasgow, G52 9AP Scotland		
	Telephone: +44 (0) 141 882 5555 Fax: +44 (0) 141 883 3704 Email: info@chalmit.com Web: www.chalmit.com	Registered No: 669157 Registered Office: Cannon Place 78 Cannon Street London EC4N 6AF UK	

For technical support, please contact: techsupport@chalmit.com

Note: Chalmit Lighting reserves the right to amend characteristics of our products and all data is for guidance only.

	EU-Declaration of conformity		
	UE-Déclaration de conformité		
	EU-Konformitätserklärung		
Manufacturer	Chalmit	Address	388 Hillington Road, Glasgow. G52 4BL Scotland UK
Product	Evolution & Evolution LT Floodlight		
EC - Type Examination Certificate	Baseefa08ATEX2372, Baseefa98ATEX2373 (X added to 120V versions).		
Notified Body	Baseefa 1180		
ATEX Coding	 II 2 GD	ATEX Classification	Group II Category 2 GD
Equipment Coding	Baseefa08ATEX2372		Baseefa08ATEX2373
	Ex d e mb IIB T3/T4 Gb -50°C ≤ Ta ≤ T°C Ex tb IIIC T**°C Db IP6X		Ex d e mb IIC T3/T4 Gb -20°C ≤ Ta ≤ T°C Ex tb IIIC T**°C Db IP6X
Ingress Protection	IP66/67		
The technical basis, with respect to equivalence of			
La base technique, en ce qui concerne l'équivalence de			
Die technische Grundlage hinsichtlich der Normen			
Protection Standards EN 60079-0, EN 60079-1, EN 60079-7, EN 60079-18, EN 60079-31.			
Area Classification EN 60079-10-1 and EN 60079-10-2			
of compliance with the EHSRs is valid as there are no changes which materially affect the state of technological progress of the product.			
en conformité avec les EESS est valide puisqu'il n'y a aucun changement qui affecte matériellement l'état de l'évolution technologique du produit.			
zur Erfüllung der GSGA ist gegeben, da keine Änderungen erfolgt sind, die einen Einfluss auf den technischen Stand des Produkts haben.			
Terms of the directive:		Standard & Date Certified to	Standards Date Declared to
Prescription de la directive:		Standard & date certifiée à	Normes date Déclaré
Bestimmungen der Richtlinie:		Standard & Datum Zertifiziert nach	Standards Datum erklärt
2014/34/EU	Equipment and protective systems intended for use in potentially explosive atmospheres.	EN 60079-0: 2012 EN 60079-1: 2007	2014
2014/34/UE	Appareils et les systèmes de protection destinés à être utilisés en atmosphères potentiellement explosibles.	EN 60079-7: 2007 EN 60079-18: 2009	2015 2015
2014/34/EU	Geräte und Schutzsysteme zur bestimmungsgemäßen Verwendung in explosionsfähigen Bereichen.	EN 60079-31: 2008	2014
2014/30/EU	Electromagnetic compatibility	EN 55015 : 2013	
2014/30/UE	Compatibilité électromagnétique	EN 61547 : 2009	
2014/30/EU	Elektromagnetische Verträglichkeit	EN 61000-3-2 : 2014	
2014/35/EU	Low voltage equipment	EN 60598-1 : 2015	
2014/35/UE	Équipements électriques à bas voltage	EN 60529 : 1992	
2014/35/EU	Niederspannungsgeräte / -systeme	EN 60598-2-5 : 2015	
2012/19/EU	Waste of electrical and electronic equipment		
2012/19/UE	Déchets d'équipements électriques et électroniques		
2012/19/EU	Entsorgung der elektrischen und elektronischen Geräte / Systeme		
2011/65/EU	RoHS II Directive		



On behalf of the Chalmit, I declare that, on the date the equipment accompanied by this declaration is placed on the market, the equipment conforms to all technical and regulatory requirements of the above listed directives.

En tant que représentant du fabricant Chalmit, je déclare qu'à la date où les équipements accompagnant cette déclaration sont mis sur le marché, ceux-ci sont conformes à toutes les dispositions réglementaires et techniques des directives énumérées ci-dessus.

Hiermit bestätige ich, im Namen von Chalmit, dass am Tag der Lieferung des Produkts/der Produkte zusammen mit dieser Erklärung das Gerät/die Geräte alle technischen und regulativen Anforderungen der oben aufgeführten Direktiven erfüllt.

Name and Date Mark Poutney 20/04/2016
Nom et Date
Name und Datum

Technical Manager
Directeur technique
Technischer Leiter

Quality Assurance Notification by:
Notification d'assurance qualité par:
Qualitätssicherungsnotifikation durch:

Baseefa Ltd.
1180

Quality Management System Accreditation:
Système de Management Qualité Accréditation:
Qualitätsmanagementsystem Akkreditierung:
Environmental Management System.
Système de gestion de l'environnement.
Umwelt kontroll system.
Certificate No./Certificat N°/Zertifikat Nr.

ISO 9001

ISO 14001
by/par/durch
Lloyd's Register
LRQ 4005876